

BATTERY AND CHARGE

Charging the earphones

The earphones have a RECHARGEABLE built-in lithium-ion polymer battery.

1. Insert a micro USB into the **MICRO USB CHARGING PORT** of the remote control.
The LED indicator will turn red during charging.
2. The red LED indicator will turn blue once the battery is fully charged.

Notes:

Before charging make sure the voltage is compatible.
Fully charge the device before using it for the first time.

SPECIFICATIONS

Bluetooth version: V5.0

Bluetooth protocol: A2DP, SPP, AVRCP, HFP, HSP

Ingress protection: IPX5

Wireless range: 10m (30 ft.)

Frequency response: 20Hz-20kHz

Sensitivity: ≥ 98 db

Battery capacity: 80mAh

Battery duration:

180 hours on standby

6 hours of play time

Charging time: 2 hours

Drive impedance: 16 ohm


Weight: 13.5g (0.48 oz)

aiwa®

ESBT-401
INSTRUCTION MANUAL

Japan est1951

HYPER BASS | ULTRALIGHT NECKBAND WIRELESS IN-EARPHONES WITH REMOTE + MICROPHONE

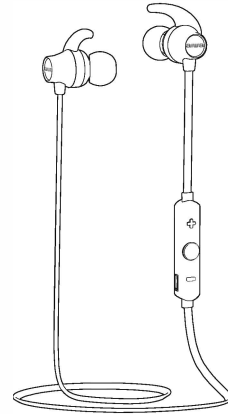

AUTHENTIC PRODUCT
AIWA CO.,LTD.
TOKYO, JAPAN

EN INSTRUCTIONS

Bluetooth pairing

When you use the earphones for the first time, follow the steps below to pair them:

1. Turn on the earphones; a voice prompt will announce "Pairing mode", and the **LED STATUS INDICATOR** will flash intermittently in red and blue.
This means that the earphones are already searching for another Bluetooth device to pair.
2. Turn the Bluetooth function of your smartphone, search for the Bluetooth devices list and select **AIWA ESBT-401**.
Enter the code "0000" if needed.
3. If the device is paired successfully, the **LED STATUS INDICATOR** will flash in blue slowly, and a voice prompt will notify that the device is connected.
Having successfully paired the device it will automatically connect to the earphones the next time.

Playing music

Once your device and the earphone are paired, you can listen to music through Bluetooth.

- To play or pause the playback, press the **MULTI-FUNCTION** button once.
- To move forward to the next track, press and hold the **+** button (**LONG PRESS**).
- To go back to the previous track, press and hold the **-** button (**LONG PRESS**).

Volume adjustment

- To increase the playback volume, press the **+** button (**SHORT PRESS**).
- To decrease the playback volume, press the **-** button (**SHORT PRESS**).

Notes:

Use your device for additional volume level adjustments.
When reaching the maximum or minimum volume, the earphones will notify it with a voice prompt.

Incoming calls

You can use the earphones to attend to your calls in handsfree mode.

- To answer an incoming call, press the **MULTI-FUNCTION** button.
- To hang up a call, press the **MULTI-FUNCTION** button.
- To reject a call, press and hold the **MULTI-FUNCTION** button.

CONTROLLER DESCRIPTION

- ① LED status indicator
- ② Volume up / Next track
- ③ Multi-function button
- ④ Volume down / Previous track
- ⑤ Micro USB charging port
- ⑥ Microphone

