



ENG



MI-X330 Meteor
User Manual



AIWA Electronics International Co., Ltd.
Explore more at www.a-iwa.com

Accessories

- MI-X330 Meteor Wireless Speaker*1
- User manual*1
- TYPE C charging cable*1
- 3.5mm Audio cable*1

Caution

Keep the speaker and its accessories away from the reach of kids as they might cause a choking hazard.

Keep the speaker away from fire, water, liquids, extreme heat, and strong magnetic fields.

Do NOT use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss.

Do NOT drop or knock the speaker on hard surfaces.

Do NOT use chemicals or detergents to clean the speaker.

Do NOT scrape the surface with sharp objects.

Do NOT make unauthorized alterations to this product.

Specification

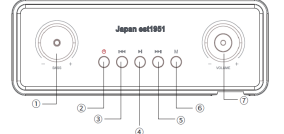 
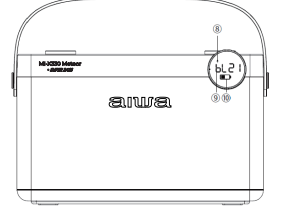 
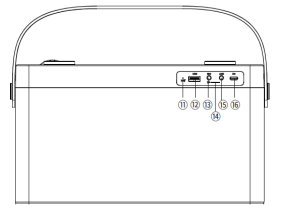 
Bluetooth : V 5.0
Material : ABS+Metal
Drivers : φ3.5 inches middle range subwoofer, 4ohm, 30W×2
 : φ31mm tweeter, 8ohm, 15W×2

Size : 303*112*176mm
Output : 30W×2
S/N : ≥70dB±3dB
Frequency range : 70Hz-20KHz
THD : ≤10% at 1KHz 60W
Channel : 2.0
Battery : 7.2V/5000mAh
Charging time : 6-7 hours
Working time : 6-10 hours
 : (With rotatable knob to control bass and volume)

Please charge up the speaker prior to first-time usage. Do charge the speaker every 6 months if un-used. MI-X330 Meteor will power down automatically after 30 minutes of inactivity.

Function Diagram

- 1 Bass control knob
- 2 Power button
- 3 Previous Track
- 4 Play/Pause
- 5 Next Track
- 6 Mode button
- 7 Volume control knob

- 8 Bluetooth icon
- 9 Speaker status indicator and volume
- 10 Battery indicator

- 11 Reset
- 12 USB disk reader port
- 13 Wired Microphone port
- 14 Micro-SD Card Slot
- 15 Aux In
- 16 Type C charging Port


Operating Instructions (I)

Items	Operation Method	Screen status
Power On	Long press "Power" button	LED On
Power Off	Long press "Power" button	LED Off
Bluetooth Pairing	Power ON, Select "AIWA Meteor" on the device's BT Menu.	Bluetooth icon Flash
Bluetooth Successful Paired	/	Bluetooth icon on
Disconnect Bluetooth	Press & Hold "Next Track" & "Previous Track" buttons together.	Bluetooth icon Flash
TWS Pairing	Double click "power" button to start TWS pairing	Bluetooth icon LED Flash and TWS icon Flash
TWS Successful Paired	/	Slave speaker Bluetooth LED on, master Bluetooth LED Flash. TWS icon on. Bluetooth icon Flash
Disconnect TWS	Press & Hold "Next Track" & "Previous Track" buttons together. (Disconnect mobile BT from the speakers first before disconnecting TWS Function)	/
Mode Changes	Short press "M" button, Switch between Bluetooth/AUX/USB/TF	Relative mode icon on


Operating Instructions (II)

AUX Mode	Insert AUX to AUX mode	"AU" displayed on Speaker status indicator screen
TF Card Mode	Insert TF Card to the TF port	"Ud" displayed on Speaker status indicator screen
USB Flash Disk	Insert U disk to U disk port	"Ud" displayed on Speaker status indicator screen
Wired Mic	Insert wired Microphone to Wired Mic port	/
Volume +	Rotate volume Knob clockwise	AU/bl/Ud xx (0-30) AU for Aux mode bl for Bluetooth mode Ud for TF and USB mode xx for volume
Volume -	Rotate volume Knob anticlockwise	AU/bl/Ud xx (0-30) AU for Aux mode bl for Bluetooth mode Ud for TF and USB mode xx for volume
Speaker bass	Rotate clockwise add bass, rotate anticlockwise to decrease, recommend to make the middle	/
Previous Song	Short press ⏮ button	/
Next Song	Short press ⏭ button	/
Pause/Play	short press ⏸ button	/

Low power	When battery lower than 20%-30%	Displayed on Battery indicator
Low Battery shutdown	When battery lower than 10%	/
Reset	Insert needle into the reset button till speaker power off	/
Charging	Insert DC 5V adapter	Red battery icon on
Charge Finished	/	Red battery icon off




AIWA Electronics International Co., Ltd.
Explore more at www.a-iwa.com

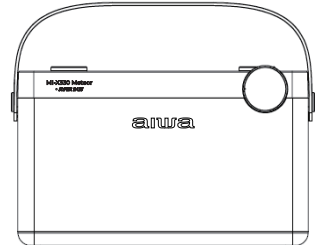 


E-Manu download

CH



MI-X330 Meteor
使用說明書



AIWA Electronics International Co., Ltd.
Explore more at www.a-iwa.com

配件

- MI-X330 Meteor 藍牙喇叭 x 1
- 說明書 x 1
- TYPE C 充電線 x 1
- 3.5mm 音源線 x 1

注意事項

將揚聲器及其配件放在兒童不易接觸的地方，因為可能會導致窒息危險。請將揚聲器遠離火、水、液體、極熱和強磁場。

請勿長時間以高音量使用本揚聲器，否則可能會導致永久性聽力損傷。

請勿使揚聲器摔落或撞擊堅硬的表面。

請勿使用化學藥品或清潔劑清潔揚聲器。

請勿用鋒利的物體刮擦表面。

請勿對本產品進行任何未經授權的更改。

產品規格

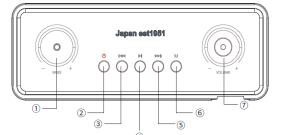 
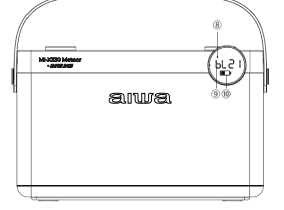 
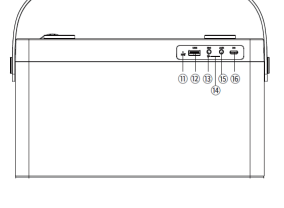 
藍牙 : V 5.0
材質 : ABS+金屬
驅動單體 : φ3.5 吋中音低音單體, 4 ohm, 30W×2
 : φ31mm 高音單體, 8 ohm, 15W×2

產品尺寸 : 303*112*176mm
輸出功率 : 30W×2
信噪比 : ≥70dB±3dB
響應頻率 : 70Hz-20KHz
總諧波失真 : ≤10% at 1KHz 60W
聲道 : 2.0
電池規格 : 7.2V/5000mAh
充電時間 : 6-7 小時
工作時間 : 6-10 小時
 : (工作時間將根據音量及其他設定有所浮動)

第一次使用前請先將電池電量充滿。
若長時間無使用，每六個月務必至少將電池電量充滿一次。
MI-X 330 Meteor 將會在開置30分鐘後自動關機。

功能介紹

- 1 低音控制旋鈕
- 2 電源鍵
- 3 上一曲
- 4 播放 / 暫停
- 5 下一曲
- 6 模式切換按鈕
- 7 音量旋鈕

- 8 藍牙指示燈
- 9 音響音量 / 狀態指示燈
- 10 電量指示燈

- 11 恢復出廠設置
- 12 USB 埠
- 13 有線麥克風插口
- 14 Micro-SD / TF 卡插槽
- 15 Aux In
- 16 Type C 充電插口


操作說明(I)

操作	操作方式	螢幕顯示狀態
開機	長按 電源 鍵	LED On
關機	長按 電源 鍵	LED Off
藍牙配對	在裝置開機後，於藍牙裝置清單中選擇 "AIWA Meteor"	藍牙燈號閃爍
藍牙配對成功	/	藍牙燈號常亮
中斷藍牙連接	同時長按 "上一曲" 以及 "下一曲" 按鍵	藍牙燈號閃爍
TWS 配對	短按兩下電源鍵以開始 TWS 配對	藍牙、TWS燈號皆閃爍
TWS 配對成功	/	副揚聲器藍牙燈號閃爍，主揚聲器藍牙燈號閃爍，TWS燈號常亮
中斷 TWS 連接	同時長按 "上一曲" 以及 "下一曲" 按鍵 (在中斷TWS連線前請先將行動裝置與音響的藍牙連接中斷)	藍牙燈號閃爍
變更模式	短按 "M" 按鍵以在藍牙/AUX/USB/Micro SD 模式之間切換	對應模式之燈號常亮


操作說明(II)

AUX IN 模式	連接AUX線以進入AUX模式	狀態螢幕顯示 "AU"
TF Card / MicroSD 模式	將MicroSD / TF卡插入MicroSD / TF 卡插槽	狀態螢幕顯示 "Ud"
USB 模式	將 USB 插入 USB 埠	狀態螢幕顯示 "Ud"
有線麥克風	將有線麥克風連接至麥克風插槽	/
音量 +	以順時針方向旋轉音量旋鈕	AU/bl/Ud XX (0-30) AU 表示 AUX 模式 bl 表示藍牙模式 Ud 表示 MicroSD / TF / USB模式 XX 數值為音量大小
音量 -	以逆時針方向旋轉音量旋鈕	AU/bl/Ud XX (0-30) AU 表示 AUX 模式 bl 表示藍牙模式 Ud 表示 MicroSD / TF / USB模式 XX 數值為音量大小
Bass(低音) 調整	順時針方向旋轉：Bass增加 逆時針方向旋轉：Bass減少	/
上一曲	短按 ⏮ 按鍵	/
下一曲	短按 ⏭ 按鍵	/
播放 / 暫停	短按 ⏸ 按鍵	/

低電量警示	當電量低於20~30%時	電池指示燈開啟
低電量自動關機	當電量低於10%時	/
恢復出廠設置	將細長物插入至恢復出廠設置按鈕，並且長按至電源關閉	/
充電	插入 DC 5V 變壓器	電池指示燈常亮紅色
充電完成	/	電池指示燈紅燈熄滅



AIWA Electronics International Co., Ltd.
Explore more at www.a-iwa.com



E-Manu download