 


MI-X440 Enigma Beta

 
User Manual

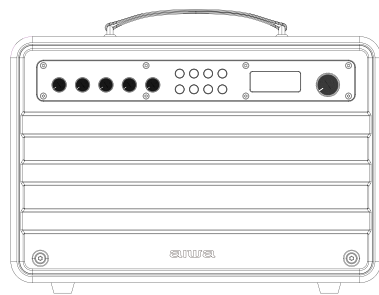

ENG

AIWA Electronics International Co., Ltd.
Explore more at www.int-aiwa.com

Unboxing

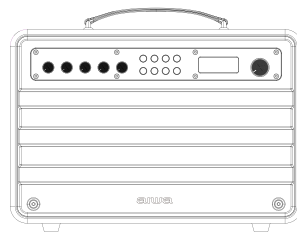

- MI-X440 Enigma Beta Speaker
- Microphone *1
- Remote control *1
- User manual *1
- DC15V 1.6A charger *1
- 3.5mm Audio cable *1
- Apple Audio cable *1
- Android Audio cable *1

Please refrain from using any damaged components.
Contact your local authorized AIWA distributor/customer service should you need any assistance.

 
 
Product Specifications

Model Number: MI-X440 Enigma Beta
 BT Version: V5.0
 RMS Output: 80W
 S/N ratio: ≥75dB
 Distortion THD: ≤10%
 Frequency Range: 60Hz–15KHz
 Sensitivity: 90±3dB
 Size: 379*279*188mm
 Battery capacity: 10.8V/5000mah (Total 6*2500,15000mah)
 Charging time: about 4 hours
 Working time: 3-9 hours (vary with volume)
 Charging voltage/Current: DC 15V/1.5A
 Support TF card, USB Disk, Music format: MP3, WAV, APE, FLAC,WMA
 Transmission distance: 10M
 (due to environmental factors and Bluetooth devices)


※ Charge Regularly

In order to guarantee the battery lifetime, please charge it atleast one time in 6 months.

Product Overview

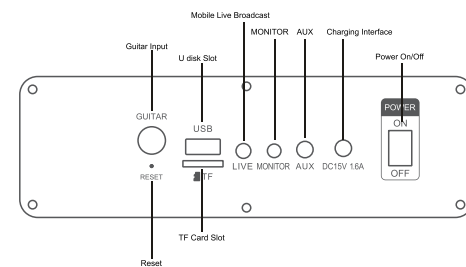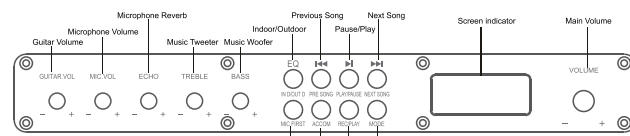

Product Overview

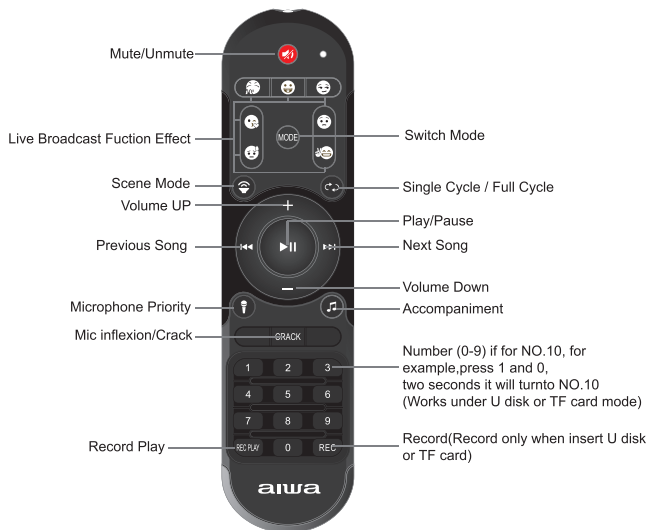 

Product Overview



Product Usage Guide


Items	Operation Method	Screen status
Power On	Power switch to "On"	LED On
Power Off	Power switch to "Off"	LED Off
Bluetooth Pairing	Power On, Choose Bluetooth "AIWA Enigma Beta" to match	Bluetooth icon LED Slow Flashing
Disconnect Bluetooth	Long press the mode buttons	Bluetooth icon LED Slow Flashing
TWS Pairing	Long press "Play" button to start TWS pairing	LED Flash
TWS Successful Pairing	/	Slave speaker LED on, master LED flashes
Record	Make sure TF card/ U Disk is inserted into and microphone is connected. Short press Record button to record voice; support record the accompaniment sound and the microphone sound into the U disk and TF. short press Record button again to quit Record	REC Icon light on
Play Record	Long press record play button to play the record files	REC Icon light on
Delete Record files	Long press play button when playing the current record files can delete files.(Only can work in record situation),	DEL Icon light on
Mode	Short press mode button, Switch Bluetooth/AUX/USB/TF	/

AUX Mode	Insert AUX cable to AUX mode	AUX Icon light on
TF Card Mode	Insert TF Card to the TF port	U/T Icon Light
USB Flash Disk	Insert U disk to U disk port	U/T Icon Light
Main Volume	Rotate main volume to right/ clockwise volume up Rotate to left/ counterclockwise volume down	Uxx (0-30) Xx for volume
Treble Volume	Rotate treble volume to right/ clockwise volume up Rotate to left/ counterclockwise volume down	AHxx (-6-6) Xx for volume
Bass Volume	Rotate bass volume to right/ clockwise volume up Rotate to left/ counterclockwise volume down	Abxx (-6-6) Xx for volume
Microphone Volume	rotate right/ clockwise volume up rotate left/ counterclockwise volume down	Udxx(0-30) Xx for volume
Microphone Echo Volume	rotate right/ clockwise volume up rotate left/ counterclockwise volume down	ECxx(0-30) Xx for volume
Sound field switch	Short press scene mode button on the remote control and change the sound field among Professional / ECHO	Professional: POPF Echo: ECHO

Mic inflexion/Crack	Short press the crack button on the remote control, (can change among the original, Male, female)	Blue LED off show UCXX (can change among the original, Male, female)
Live broadcast function	Insert the live broadcast cable into the speaker Jack, and another side connect to live broadcast devices, Use another devices connect to the speaker by AUX or Bluetooth, through this, you can transfer all the sound to the live broadcast phone	/
Live broadcast effect	Through the remote control there are applause, kiss, Awkward, laughter, contempt, ,silence seven special effects	/
Previous Song	Short press ◀◀ button	/
Next Song	Short press ▶▶ button	/
Microphone Priority	Press the microphone on the remote Control first or MIC First button on the speaker	Light on

Accompaniment	Press the accompany button on the remote control or Accomp button on the speaker	Music icon on
Pause/Play	short press "play/Pause" button	/
EQ	Short press the EQ button on the speaker	Indoor mode: INT Outdoor mode: OUT
Monitor/Earphone function	Simply insert earphone to the Monitor port, speaker will muse. sound will come out from earphone. long Press EQ button, Both speaker and earphone will have sound, long press again, speaker will muse	/
Low power	When battery lower than 20%	Battery icon has power display
Low Battery shutdown	When battery lower than 10%	Battery icon has power display
Clear pair list	Under the Bluetooth mode but did not connect, long press previous sound button will clear the pairing list	Show rEst
Reset	Insert needle into the reset button till speaker power off	/
Charging	Insert DC 15V adapter	Red LED on
Charge Finished	/	Red LED off

 TWS Function

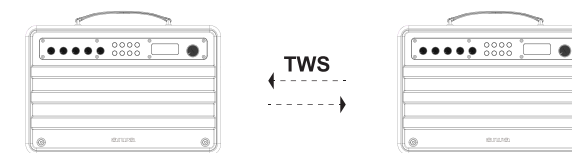

1. Turn on two speakers, you will see the LED screen flashes.
2. Select one device as the main speaker, long press "Play" button and you will go to automatically pairing mode.LED screen flashes at thistime.
3. After successfully paired, the LED screen flashes, the auxiliary machine LED screen on, and the main speaker Bluetooth symbol is flashing slowly.
4. Turn on your phone's Bluetooth, search AIWA Enigma Beta and connect. The two devices play music simultaneously.
5. Disconnect TWS: Long press "Play" button to disconnect the TWS pairing. LED screen flashes.

