 



## MI-X800 Enigma Alpha User Manual

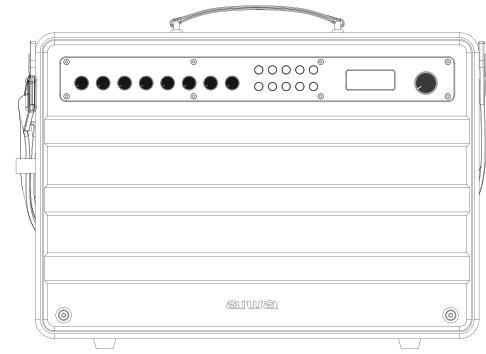

ENG

AIWA Electronics International Co., Ltd.  
Explore more at [www.int-aiwa.com](http://www.int-aiwa.com)
 
### Unboxing

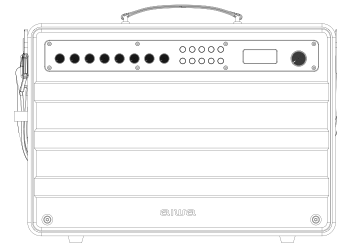

- MI-X800 Enigma Alpha Speaker
- Microphone\*2
- Remote control\*1
- User manual\*1
- DC24V charger\*1
- 3.5mm Audio cable\*1
- Apple Audio cable\*1
- Android Audio cable\*1



Please refrain from using any damaged components.  
Contact your local authorized AIWA distributor/customer service should you need any assistance.

### Product Specifications

  Model Number: MI-X800 Enigma Alpha  
BT Version: V5.0  
RMS Output: 200W  
S/N ratio: ≥75dB  
Distortion THD: ≤10%  
Frequency Range: 50Hz–15KHz  
Sensitivity: 102±3dB  
Size: 454\*181\*323mm±5mm  
Battery capacity: 18V/5000mah (Total 5\*5000, 25000mah)  
Charging time: about 6 hours  
Working time: 2-12 hours (vary with volume)  
Charging voltage/Current: DC 24V/1.5A  
Support TF card, USB Disk, Music format: MP3, WAV, APE, FLAC, WMA  
Transmission distance: 10M  
(due to environmental factors and Bluetooth devices)

※ Charge Regularly  
In order to guarantee the battery lifetime, please charge it at least one time in 6 months.

### Product Overview

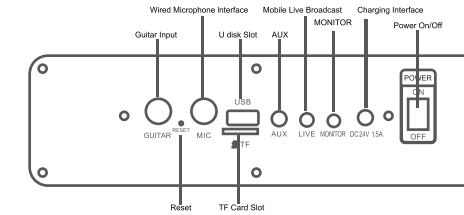

### Product Overview



### Product Overview



### Product Usage Guide

 
Items	Operation Method	Screen status
Power On	Power switch to "On"	LED On
Power Off	Power switch to "Off"	LED Off
Bluetooth Pairing	Power On, Choose Bluetooth "AIWA Enigma Alpha" to match	Wait for pairing: BLXX flash Pair successfully: BLXX on Bluetooth icon on
Disconnect Bluetooth	Long press the mode buttons	Wait for pairing: BLXX flash Bluetooth icon on
TWS Pairing	Long press "Play" button to start TWS pairing	LED Flash
TWS Successful Pairing	/	Slave speaker LED on, master LED flashes
Record	Make sure TF card/ U Disk is inserted into and microphone is connected. Short press Record button to record voice; support record the accompaniment sound and the microphone sound into the U disk and TF. short press Record button again to quit Record(Remark: only can record under the BT and AUX Mode)	REC Icon light on
Play Record	Long press record play button to play the record files	REC Icon light on
Delete Record files	Long press play button when playing the current record files can delete files.(Only can work in record situation),	dELE Icon on
Mode	Short press mode button, Switch Bluetooth/AUX/USB/TF	/

AUX Mode	Insert AUX cable to AUX mode	AUX Icon on
TF Card Mode	Insert TF Card to the TF port	U/T Icon on
USB Flash Disk	Insert U disk to U disk port	U/T Icon on
Main Volume	Rotate main volume to right/ clockwise volume up Rotate to left / counterclockwise volume down	Uxx (0-30) Xx for volume
Treble Volume	Rotate treble volume to right/ clockwise volume up Rotate to left / counterclockwise volume down	AHxx (-6-6) Xx for volume
Bass Volume	Rotate bass volume to right/ clockwise volume up Rotate to left / counterclockwise volume down	Abxx (-6-6) Xx for volume
Microphone Volume	rotate right/ clockwise volume up rotate left/ counterclockwise volume down	Udxx(0-20) Xx for volume
Microphone treble	rotate right/ clockwise treble increase rotate left/ counterclockwise treble down	hxx(-6-6) Xx for volume
Microphone bass	rotate right/ clockwise bass increase rotate left/ counterclockwise bass down	bxx(-6-6) Xx for volume

Microphone Echo	rotate right/ clockwise Echo increase  rotate left/ counterclockwise echo down	Exx(0-20) Xx for volume
Microphone Delay	rotate right/ clockwise Microphone delay more Time rotate left/ counterclockwise delay Less Time	txx(0-20) Xx for Time
Guitar/Instrument Volume	Rotate Guitar volume to right/ clockwise volume up Rotate to left / counterclockwise volume down	txx(0-20) Xx for volume
Sound field switch	Short press scene mode button on the remote control and change the sound field among Original, Professional, Popular, Echo	Original:PYOF Professional:POPF Popular:YEUY Echo:OYIG
Mic inflexion/Crack	Short press the crack button on the remote control, (can change among the Male, female, Baby , Monster, Original)	show UCXX (can change among the Male, female, Baby , Monster, Original)
Tone +/-	Short press the tone +/- to Increase/Decrease the tone of the music being played	show tyXX(0-5)

	Insert the live broadcast cable into the speaker Jack, and another side connect to live broadcast devices, Use another devices connect to the speaker by AUX or Bluetooth, through this, you can transfer all the sound to the live broadcast phone	/
Live broadcast effect	Through the remote control there are applause, kiss, Awkward, laughter, contempt, ,silence seven special effects	/
Previous Song	Short press Pre song button	/
Next Song	Short press Next song button	/
Microphone Priority	Long Press the microphone on the remote Control first or ACC/MCC 1 button on the speaker	Light on
Accompaniment	Short Press the accompany button on the remote control or ACC/MCC 1 on the speaker	on
Pause/Play	short press "play/Pause" button	/
EQ	Short press the EQ button on the speaker	Indoor mode: INT Outdoor mode: OUT
Monitor/Earphone function	Simply insert earphone to the Monitor port, speaker will muse, sound will come out from earphone. long Press EQ button, Both speaker and earphone will have sound, long press again, speaker will muse	/
Low power	When battery lower than 20%	Battery icon has power display
Low Battery shutdown	When battery lower than 10%	Battery icon has power display
Reset	Insert needle into the reset button till speaker power off	/
Charging	Insert DC 24V adapter	Red LED on
Charge Finished	/	Red LED off

### TWS Function

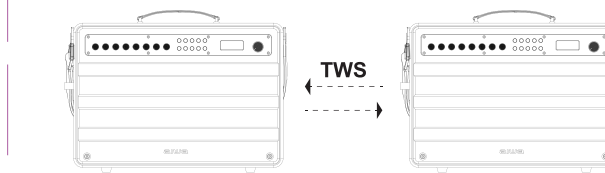

1. Turn on two speakers, you will see the LED screen flashes.
2. Select one device as the main speaker, long press "Play" button and you will go to automatically pairing mode. LED screen flashes at this time.
3. After successfully paired, the LED screen flashes, the auxiliary machine LED screen on, and the main speaker Bluetooth symbol is flashing slowly.
4. Turn on your phone's Bluetooth, search AIWA Enigma Alpha and connect. The two devices play music simultaneously.
5. Disconnect TWS: Long press "Play" button to disconnect the TWS pairing. LED screen flashes.

