

Portable Wireless Stereo Speaker


USER MANUAL

SB-X350P


Package Includes

- 1 x Speaker
- 1 x Type-C charging Cable
- 1 x AUX Cable (Φ3.5mm)
- 1 x User Manual

Overview of Speaker

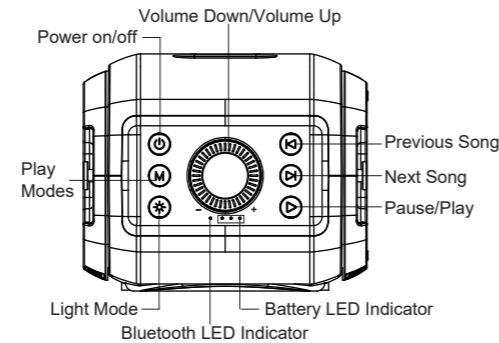

1

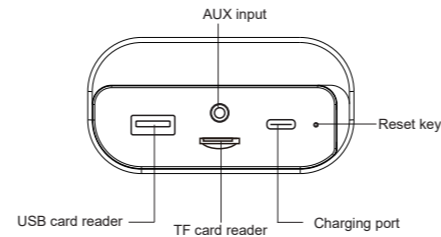

Charging

1. Before first time use, fully charge the built-in battery.
2. Connect the Type-C Cable (included) between the Charging port on the speaker, and a USB port on a computer or USB AC Adapter.

Battery Status	Battery LED Indicator
Low battery (<20%)	Blinking Red (Sound Prompts 3 times at 20%, 10%, and power off)
30% charged	1st white light flashes
30%-70% charged	2nd white light flashes
70%-99% charged	3rd white light flashes
3 solid white lights	Fully charged

2

Note: When the battery charge <5%, the speaker will power off automatically.

Power On

Press button until hear a rising tone and the Bluetooth LED Indicator light on.

Power Off

Press button until hear a descending tone and the Bluetooth LED Indicator light off.

Bluetooth connection

- Make sure that the speaker is within 10 meters from your mobile device,
1. Press button until hear a rising tone and the Bluetooth LED Indicator fast blinking blue.
 2. Go to the Bluetooth settings on your mobile device, search and select "AIWA SB-X350P" from the list.
 3. Once paired, the LED indicator turns blue.

Note:

- When power on, the speaker automatically reconnects to the last mobile device it was connected to. (The speaker can memorize maximum of 8 paired devices).
- The speaker will automatically shut down after 10 minutes in pairing mode if no devices are paired for power saving.

3

Music Control

- Play/Pause Click
- Volume UP Rotate the knob Clockwise
- Volume Down... Rotate the knob Counterclockwise
- Next track click
- Previous track click
- Switch Bluetooth mode/Aux-in mode.....Click M

Bluetooth Disconnection

Press " M " button until the Bluetooth LED Indicator fast blinking blue to disconnect the current connected device, and go into new Bluetooth-pairing mode.

4

TWS (True Wireless Stereo) Function

The TWS technology enables you to use two speakers pairing via Bluetooth to create a wireless dual-channel system to deliver true stereo sound effect.

TWS connection operation

1. Place the two speakers near each other (the distance should not be over 10 meters).
2. Power on the two speakers, double click the button on one speaker as MASTER speaker (playback left channel), the LED indicator fast blinking Blue and green then the two speaker will pair to each other automatically (The other speaker will be as SLAVE speaker and playback right channel)
3. Once paired, Master and slave speaker LED indicator turn solid blue

Disconnect the TWS connection

Press " M " mode button on one of the speaker until LED Indicator fast blinking Blue to disconnect the TWS connection.

5

Listening music from external audio source

1. Power on the speaker.
2. Using the AUX Cable (Φ3.5mm), connect your external device to AUX-in port on speaker.
3. It will automatically turn to AUX-in mode, the LED Indicator turns solid green.

Note: Under AUX-IN mode, skip songs are not workable.

LED lights Mode

- Click button to change the LED Lights modes.
- 1: Musical Pulse (Pulse from bottom to top)
 - 2: Half-circle rotation (rotate with the rhythm of the music)
 - 3: Full-Cyclic rotation (rotation speed is automatically adjusted with the size of the music)
 - 4: Flash rhythm (brightness flashes with the beats of the music)
 - 5: Musical Pulse (from the middle to the upper and lower pulse)
 - 6: Turn off the lights

Sound mode

Double click button to change the sound mode. The LED indicator slowly flash blue in outdoor mode, and the LED indicator keep solid blue in indoor mode.

Remark: This speaker's default mode is indoor. Under the USB disk and TF card mod, LED is green.

Mode Change Button : Outdoor/Indoor

6

TF card reader (micro SD card)

Just simple insert your TF card into the port, the speaker can automatically turn to TF card reader mode, and play the MP3 music store in the card.

Reset the speaker: If the function buttons without working, disconnect the charging cable, place a small pin (<3mm) into the reset key and hold it for 2 seconds until the LED light off.

Specifications

- Bluetooth 5.0
- Support: A2DPV1.2; AVRCPV1.4, GAVDPV1.2; AVDTPV1.2; SPPV1.2; AVCTPV1.2
- Wireless work distance: 10 meters
- Output Power: 2*30W
- Driver Unit: Diameter 102 mm outside magnet, 4ohm, 35W*2
Diameter 31 mm inside magnet, 8ohm, 15W*2
- Frequency response: 60Hz-20KHz
- Signal-to-noise ratio: ≥80DB
- Battery type: Lithium-ion, 7.2V/4000MAH(4*2000mah)
- DC input voltage/current: TYPE-C USB 5V/0.5A-2A
- Playtime: 2.5-10 hours (varies by volume level and content)
- Battery charge time: 5-6 hours
- Dimensions: 372*193.3*166mm
- Weight: 3.7 kgs

7

Caution

- Keep the speaker and its accessories away from the reach of kids as they might cause a choking hazard.
- Keep the speaker away from fire, water, liquids, extreme heat, and strong magnetic fields.
- Do NOT use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss.
- Do NOT drop or knock the speaker on hard surfaces.
- Do NOT use chemicals or detergents to clean the speaker.
- Do NOT scrape the surface with sharp objects.
- Do NOT make unauthorized alterations to this product.

Troubleshooting

Cannot Power On

Charge the speaker and make sure it has enough battery

Cannot connect with the device

- Please check the following:
- The Bluetooth device supports A2DP profile
- The Speaker is within 10m from the device.
- The Speaker is in pairing mode, the LED indicator blinking blue.

8

No Sound

- Make sure the music volume is at audible level on both your device and speaker.
- Make sure your device is successfully paired with the speaker, the LED indicator turn solid blue.

Poor sound quality

Move the device closer to this Speaker or remove any obstacle between them.

9