 


AM/FM POCKET RADIO

USER MANUAL

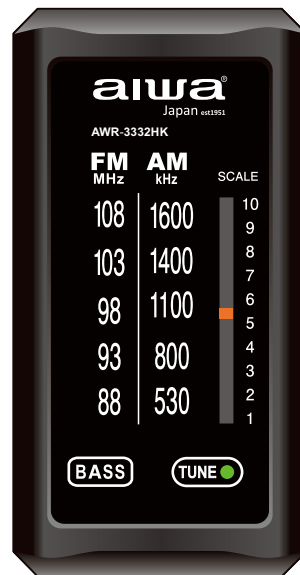

 
AWR-3332HK

Aiwa Electronics Int'l Co, Ltd

WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment


FUNCTION INDICATION

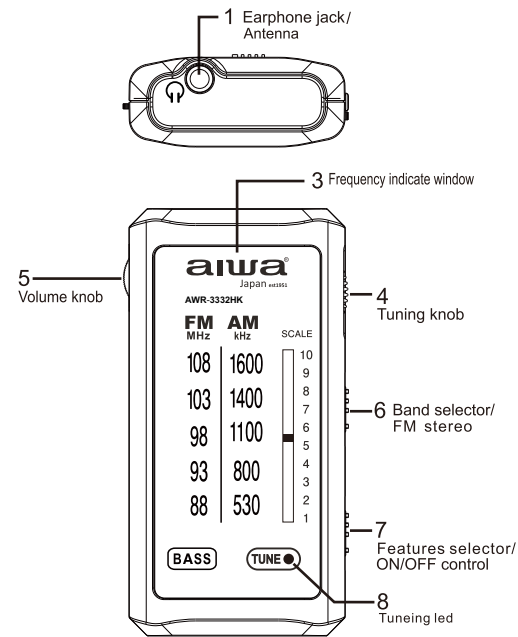

POWER SUPPLY

■ USE BATTERIES

 Insert two LR06 or AAA size batteries with correct polarity.

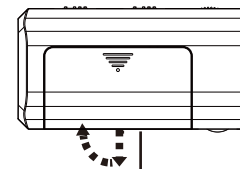

Battery compartment.

Precautions

- Operate the unit only on 2 pc 1.5V AAA Battery
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- When the case becomes soiled, clean it with a soft cloth dampened with a mild detergent solution. Never use abrasive cleansers or chemical solvents, as they may mar the case.
- Do not leave magnetic bank cards, magnetic train passes, or other cards containing magnetic information near the speaker. The information on the card may be erased by the magnetism.

RADIO OPERATION

1.TURN ON/OFF RADIO

Slide the function selector knob 7 to the open position to turn on the radio. Slide the band selector 6 to the AM, FM, FM stereo cut position to turn on the radio and receive the desired station, slide the function selector knob 7 to enhance the bass, slide to turn off the radio

2.SELECTING THE BAND

Turn radio on, slide the band selector 6 to the AM, FM, FM stereo cut position to turn on the radio and receive the desired station

3.SEARCHING THE STATION

 
Select the band, turn the tuning knob 4, watch the frequency in the display of frequency indicate window 3 to receive a desired station.

4.ADJUSTING THE VOLUME

Adjust the unit volume knob 5 to your desired, in the up direction, VOLUME+, reverse, VOLUME-.

5.USING EARPHONE

Avoid to interrupt the other, please listen with an earphone. Using \varnothing 3.5mm earphone pin inserts earphone jack 1.

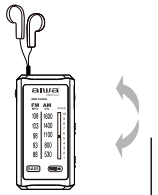

6.USING THE ANTENNA RECEIVING FM BROADCAST

Extend the antenna 1 for better reception.

RECEIVING AM BROADCAST

Rotate the unit horizontally for optimum reception, as a ferrite bar antenna is built into the unit.



SPECIFICATIONS

Frequency range

FM: 88-108 MHz
AM: 530-1600 kHz

Sensitivity

FM \leq 20dB AM \leq 80dB

Signal-to-noise ratio: \geq 40dB

Earphone: \varnothing 3.5mm earphone jack

Power supply:

DC: 3V (two LR06/AAA size batteries)

Dimensions: 41(L)x17(W)x81(H)mm