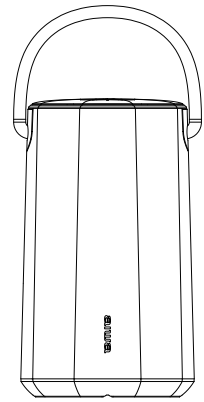


MI-X290 Flicker User Manual



ENG

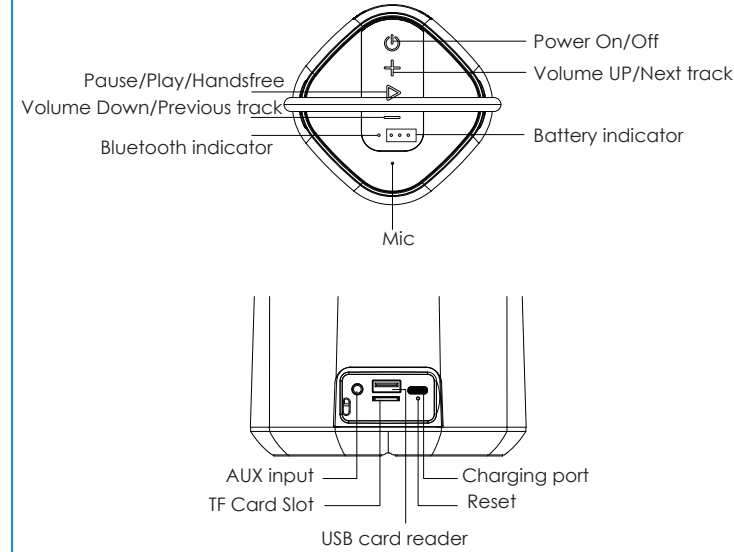
Caution

- Keep the speaker and its accessories away from the reach of kids as they might cause a choking hazard.
- Keep the speaker away from fire, water, liquids, extreme heat, and strong magnetic fields.
- Do NOT use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss.
- Do NOT drop or knock the speaker on hard surfaces.
- Do NOT use chemicals or detergents to clean the speaker.
- Do NOT scrape the surface with sharp objects.
- Do NOT make unauthorized alterations to this product.

Package Contents

MI-X290 Flicker Portable Party Speaker x1
USB Type-C Charging Cable x1
3.5mm Audio Cable x1
User Manual x1






Product Diagram









Specifications

Model Number	MI-X290 Flicker
Bluetooth Version	BT5.0
Bluetooth Pairing Name	AIWA Flicker
Speaker Output Power	40W
Product Size	116.5mm x 116.5mm x 222mm
Drivers	φ 78mm middle range subwoofer, 4ohm, 30W×1 φ 50mm tweeter, 4ohm, 15W×2
Time	Charging: About 4-5 hours Working: About 5-12 hours
Frequency Range	70Hz ~ 20KHz
THD	≤10% at 1KHz 10W
S/N	≥72dB
True Wireless Stereo	Yes
Music Source Input	Support Bluetooth / AUX / TF-card in / USB Disk

Operating Instructions

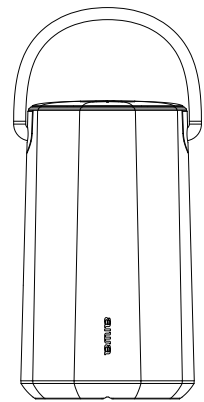
Items	Operation Method	LED status
Power On	Long press  button	Blue LED On
Power Off	Long press  button	Blue LED Off
Bluetooth Pairing	Turn on speaker, Choose Bluetooth AIWA Flicker to match	Blue LED flashes
Bluetooth Successful Paired	/	Blue LED solid
Disconnect Bluetooth	Press and hold the "+" and "-" button together for 2 seconds	Blue LED flashes
TWS Pairing (two speakers connect)	Under the not pair situation, Long press one of the speaker's  button to start TWS pairing	Slave speaker Bluetooth LED on, master Bluetooth LED Flash.
TWS Successful Paired With phone	After two speaker connect, connect speaker by phone	Blue LED ON
Disconnect TWS	Press and hold the  button	Blue Bluetooth LED Flash
Mode Changes	Short press  button, Switch Bluetooth/AUX/USB/TF	Relative LED color ON

Operating Instructions

Items	Operation Method	LED status
AUX Mode	Insert AUX cable to AUX port	Green LED on
TF Card Mode	Insert TF Card to the TF port	Green LED on
USB Flash Disk	Insert U disk to U disk port	Green LED on
Volume +	Short press the "+" button	/
Volume -	Short press the "-" button	/
Previous Song	Long press the "  " button	/
Next Song	Long press the "  " button	/
Pause/Play	short press  button	/
Receive a call	Short press the  when a call in	/
Reject a call	Long press the  when a call in	/
Hang up	Short press the  when on a call	/
Low battery warning	When battery lower than 20%	White Battery LED flash
Low Battery shutdown	When battery lower than 10%	/
Reset	Insert needle into the reset button till speaker power off	LED off
Charging	Insert DC 5V adapter	Red LED on
Charge Finished	/	Red LED off



MI-X290 Flicker คู่มือการใช้งาน



THI

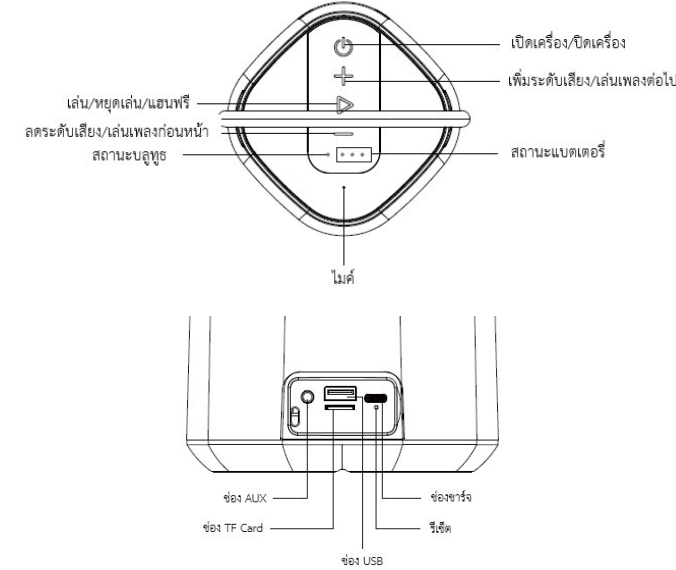
ข้อควรระวัง

- ควบคุมเครื่องและอุปกรณ์ให้ห่างจากมือเด็ก
- ควบคุมเสียงตัวเครื่องจากความร้อนและความชื้น
- ไม่ควรเปิดเสียงตั้งเป็นเวลานาน อาจส่งผลเสียต่อระบบการได้ยิน
- ห้ามทำตกหรือกระแทกลำโพงกับพื้น
- ห้ามซูดหรือถูลำโพงกับของมีคม
- ห้ามปรับเปลี่ยนหรือตัดแปลงสินค้าโดยไม่ได้รับอนุญาต

อุปกรณ์ภายในเครื่อง

คู่มือการใช้งาน 1 เล่ม
สายชาร์จ Type C 1 เส้น
สาย AUX 3.5mm 1 เส้น

แผนผังฟังก์ชันการใช้งาน








รายละเอียดสินค้า





ชื่อรุ่น: AIWA Flicker
ระบบบลูทูธ : 5.0
วัสดุ : ABS+Fabric
อุปกรณ์ภายใน : φ 78mm middle range subwoofer, 4ohm, 30W×1,
φ 50mm tweeter, 4ohm, 15W×2
ขนาด : 116.5*116.5*222mm
กำลังขับ : 40W
S/N : ≥72dB
ความถี่ : 70Hz-20KHz
THD : ≤10% at 1KHz 10W
Channel : 2.1
แบตเตอรี่ : 7.2V/4000 mAh (3.6V/2000mAh x 4pcs, total 8000 mAh)
ระยะเวลาการชาร์จ : 4-5 ชั่วโมง
ระยะเวลาการใช้งาน : 5-12 ชั่วโมง (ขึ้นอยู่กับลักษณะการใช้งาน)

- ชาร์จแบตเตอรี่ให้เต็มก่อนใช้งานครั้งแรก
- ในกรณีที่ไม่ได้ใช้งานเป็นเวลานาน เพื่อเป็นการยืดอายุการใช้งานแบตเตอรี่ควรชาร์จแบตเตอรี่อย่างน้อยหนึ่งครั้งในหกเดือน
- ไม่ควรเปิดใช้งานเครื่องในระหว่างชาร์จเพราะจะทำให้แบตเตอรี่เสื่อมเร็วและเกิดความร้อนที่ส่วนภายในเครื่อง

วิธีการใช้งาน

รายการ	วิธีการใช้งาน	ไฟแสดงสถานะ
เปิดเครื่อง	กดปุ่ม  ค้าง	ไฟ LED สีน้ำเงิน
ปิดเครื่อง	กดปุ่ม  ค้าง	ไฟ LED สีน้ำเงินปิด
การเชื่อมต่อบลูทูธ	เปิดเครื่อง, เลือกบลูทูธ AIWA Flicker เพื่อเชื่อมต่อ	ไฟ LED สีน้ำเงินกะพริบ
เชื่อมต่อบลูทูธสำเร็จ	/	ไฟ LED สีน้ำเงินค้าง
ยกเลิกการเชื่อมต่อบลูทูธ	กดปุ่ม + และ - พร้อมกันค้างไว้ 2วินาที	ไฟ LED สีน้ำเงินกะพริบ
เชื่อมต่อ TWS (เชื่อมต่อสองลำโพงเข้าด้วยกัน)	กดปุ่ม  ค้างเพื่อเปิดโหมด TWS	ลำโพงเครื่องรองแสดงไฟ LED, ลำโพงเครื่องหลักแสดงไฟ LED กะพริบ
เชื่อมต่อ TWS สำเร็จกับโทรศัพท์	หลังจากลำโพงทั้งสองเครื่องเชื่อมต่อกันแล้ว, เชื่อมต่อบลูทูธกับลำโพงผ่านโทรศัพท์	แสดงไฟ LED สีน้ำเงิน
ยกเลิกการเชื่อมต่อ TWS	กดปุ่ม  ค้าง	ไฟ LED สถานะบลูทูธกะพริบ
เปลี่ยนโหมด	กดปุ่ม  เพื่อเปลี่ยนเป็นโหมด BT/AUX/USB/TF	แสดงไฟ LED

วิธีการใช้งาน

โหมด AUX	เสียบสาย AUX ในช่อง AUX	ไฟ LED สีเขียว
โหมด TF Card	เสียบ TF Card ในช่อง TF	ไฟ LED สีเขียว
โหมด USB	เสียบ USB ในช่อง USB	ไฟ LED สีเขียว
เพิ่มระดับเสียง	กดปุ่ม "+"	/
ลดระดับเสียง	กดปุ่ม "-"	/
เล่นเพลงก่อนหน้า	กดปุ่ม "+" ค้าง	/
เล่นเพลงต่อไป	กดปุ่ม "-" ค้าง	/
หยุด/เล่น	กดปุ่ม 	/
รับสายโทรศัพท์	กดปุ่ม  เมื่อมีสายเข้ามา	/
ปฏิเสธสายโทรศัพท์	กดปุ่ม  ค้างเมื่อมีสายเข้ามา	/
วางสาย	กดปุ่ม  เมื่ออยู่ในสาย	/
แจ้งเตือนแบตเตอรี่ต่ำ	เมื่อแบตเตอรี่ต่ำกว่า 20%	ไฟสถานะแบตเตอรี่กะพริบ
แจ้งเตือนเปิดเครื่องเมื่อแบตเตอรี่ต่ำมาก	เมื่อแบตเตอรี่ต่ำกว่า 10%	/
รีเซ็ต	ใช้เข็มจิ้มเข้าไปในช่องรีเซ็ต จนกว่าลำโพงจะปิด	ไฟ LED ปิด
การชาร์จ	เสียบสายชาร์จกับ Adapter 5V/2A	แสดงไฟ LED สีแดง
ชาร์จแบตเตอรี่เต็ม	/	ไฟ LED สีแดงดับ

