

aiwa

Portable Juicer | PJ-460

User Manual
 使用者指南
 使用手冊
 उपभोक्तागाइड
 사용자 설명서
 คู่มือการใช้
 hướng dẫn sử dụng
 प्रयोगकर्ता पुस्तिका

Important Safety Instructions

1. Please do not install device near any form of heat sources.
2. Please use accessories specified by the manufacturer.
3. Please refer all servicing to qualified personnel should there be any form of damage to the device.
4. Do not move the portable blender around during operation.
5. Never operate the portable blender if it is damaged.
6. Never operate without the body securely screwed on.
7. Never place any non-food/ foreign items into the portable blender.
8. Never operate the portable blender with more than the available capacity of the jar.
9. This product is advised not to be used for more than 20 seconds each time.
10. Do not attempt to blend hot liquids/ ingredients.

SAFETY CAUTIONS


1. Keep device AWAY from fire and heat sources at all times.
2. Do NOT attempt to disassemble or alter the device.
3. Do NOT expose the device to excessive heat. (Direct sunlight e.g.).
4. Do NOT immerse/ expose device to any form of fluids.
5. Product label is located at the bottom of the product.

Additional Product Safety Information

1. Avoid any form contact with moving parts.
2. Always keep any objects away from the blender blade.
3. Never touch the blade with your fingers.
4. Do not move the portable blender around during operation.
5. Never operate the portable blender if it is damaged.
6. Never operate without the body securely screwed on.
7. Never place any non-food/ foreign items into the portable blender.
8. Never operate the portable blender with more than the available capacity of the jar.
9. This product is advised not to be used for more than 20 seconds each time.
10. Do not attempt to blend hot liquids/ ingredients.


This product is not intended for use by persons with reduced physical, mental, sensory capabilities (including children) or lack of experience, unless under the supervision of a person/ adult responsible for their safety.

Unboxing

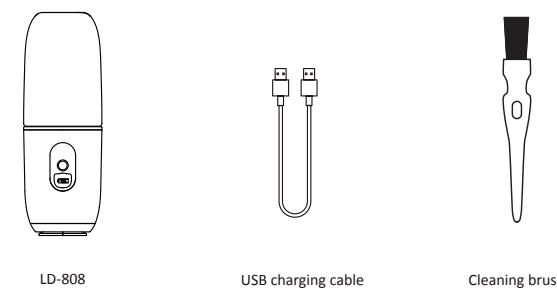

Please refrain from using any damaged components.
 Contact your local authorised aiwa distributor/customer service.

Product Overview

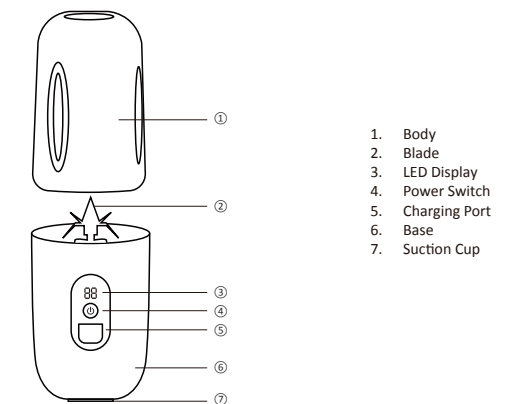

1. Body
2. Blade
3. LED Display
4. Power Switch
5. Charging Port
6. Base
7. Suction Cup

Product User Recommendations

Follow to below recommendations to achieve the best blender experience

- Load ingredients in this order:
1. Liquids
 2. Soft Solids (Fruits are recommended to be diced into 1.5cm by 1.5cm size)
 3. Hard, dense, or frozen items

This is so as to prevent cavitation.
 Please refer to troubleshooting section for more information.

Product Walkthrough



1. Load ingredients into the blender (Refer to previous page for ingredient loading recommendations) .
2. Press the power button to start blending.
3. Press again to turn off the blender.
4. Wash the blender after use.

The portable blender will automatically power-off after 20 seconds of operation to prevent over heating

Cleaning & maintenance



1. Use a sponge and a few drops of dishwashing liquid to wash the portable blender.
2. Rinse with warm water.

Always power off when washing the blender
 Always wash after each use

Battery & Charging



Connect the USB cable to the portable juicer and plug it in.

Approximate charging time - 3-5 Hours
 Approximate usage - 8-15 Complete Blends

LED Indicator



- 88: The blender is successfully started up
- Er: Error (Please tighten the blender cup)
- EL: Overload protection
- Ch: Charging in progress
- Fu: Battery full charge
- Lo: Low battery
- Lo/Er: Battery malfunction

Troubleshooting

The portable blender cannot be turned on, the indicator light flashes red.
 Tighten the blender bottle. The security mechanism is engaged.

The portable blender stops working after a few seconds, the indicator light flashes blue.
 Idle run 5 seconds. Restart portable blender and try again.

The portable blender stopped working abruptly, the indicator light flashes red.
 The motor is stuck. Remove possible foreign hard object and restart the portable blender.

The portable blender is leaking water.
 The silicone ring might be out of place. Install it properly and restart the portable blender.

Limited Warranty

Please refer to the warranty label provided in the box.

- Note: Disassembling device voids warranty.
- Note: Liquid submersion voids warranty.
- Note: Damage caused by placing foreign objects into the portable blender voids warranty.

Customer service

For more product information please visit www.int.aiwa.com.

Contact your local authorised dealer/ customer service. Refer to the warranty label provided in the box.

Device specifications

Model number	: PJ-460
Capacity	: 460ml
Lid material	: PP
Body material	: PC
Base material	: ABS
Blade material	: SS 304
Voltage	: 7.4V
Rotate Speed	: 17000 rpm ± 15% (no-load) ; 15000 rpm ± 15% (load)
Electricity	: 12-15A
Battery	: 2400mAh
Product Size	: 80x80x225 mm

aiwa

Aiwa Electronics Int'l Co., Ltd.
 Explore more at www.int.aiwa.com